

Installation

PROCEDURES


PAGE 1/1

SUBJECT

THROTTLE SWITCH KIT

APPLICATION

C11911

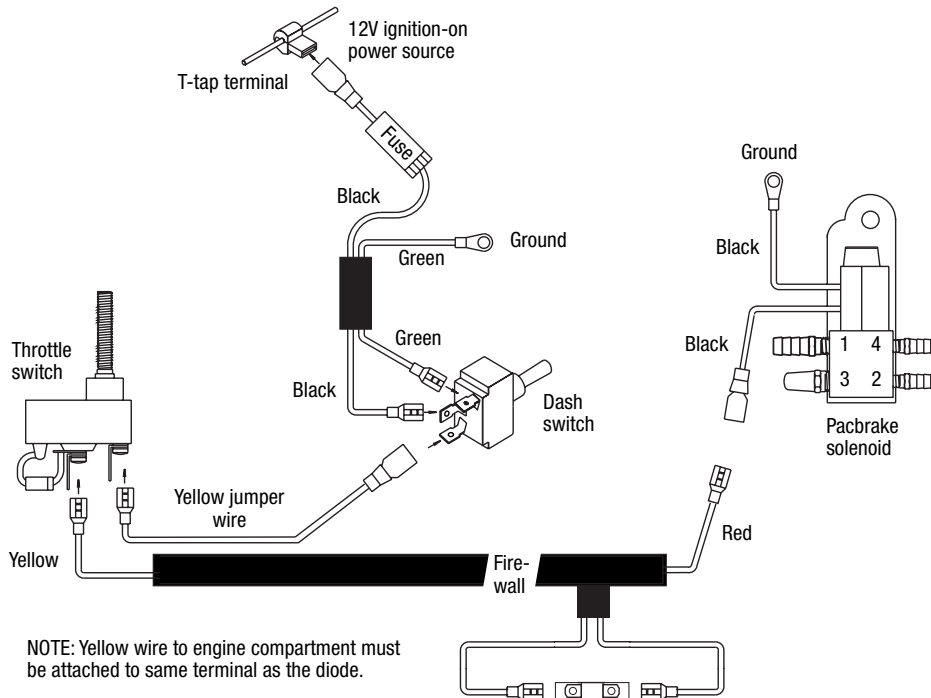

Instructions:

1. Disconnect wires to existing throttle switch. Then using the clear plastic connector provided, connect these two wires together and remove the switch and bracket.

2. Remove dash panel below steering column.

Locate the stud shown (see arrow) and remove the nut.

Install the throttle switch assembly with the switch arm horizontal. Reinstall the stud nut and tighten, making sure the switch arm is behind the throttle lever.

Adjust the switch by loosening the screws and positioning it to "click" as the throttle returns to its released position. Cycle the throttle and listen for the click sound each time the throttle returns to idle.

3. At dash switch, remove yellow wire and install it on the new throttle switch (to the terminal with diode attached).

4. Add the yellow jumper wire provided from the dash switch to throttle switch as shown above.



PACBRAKE[®]
ENGINE & EXHAUST BRAKES